

Sommaire de pose Lambris régulier Maibec (installé avec clous)

Une évacuation efficace de l'eau et une ventilation continue du mur sont les principes de base qui guident l'installation du lambris Maibec et assurent l'apparence et la performance du produit.

Ce document présente les principales exigences à respecter pour obtenir une installation conforme du lambris régulier Maibec. IL NE REMPLACE EN AUCUN CAS LE GUIDE COMPLET D'INSTALLATION DU LAMBRIS RÉGULIER DONT LE CONTENU DOIT ÊTRE RESPECTÉ DANS SON ENSEMBLE.

Installation Summary Maibec Regular Siding (with visible nails)


To ensure the proper appearance and performance of the product, Maibec siding must be installed according to two key installation principles: adequate water evacuation and continuous wall ventilation.

This document outlines the key requirements for properly installing Maibec regular siding. THIS DOCUMENT IN NO WAY REPLACES THE COMPLETE MAIBEC REGULAR SIDING INSTALLATION GUIDE, WHICH MUST BE FOLLOWED IN ITS ENTIRETY.

PRÉPARATION DU MUR | WALL PREPARATION

POSE HORIZONTALE | HORIZONTAL INSTALLATION


FIGURE 1

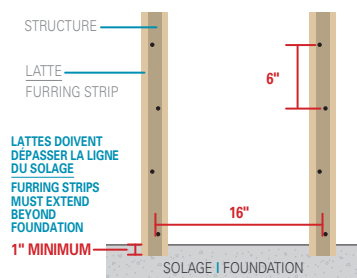

Aucune latte horizontale au bas du mur.

Never install furring strip horizontally at the bottom of walls.

FIGURE 2

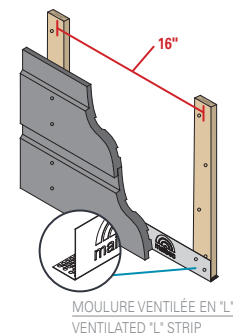

POSE VERTICALE | VERTICAL INSTALLATION

FIGURE 3


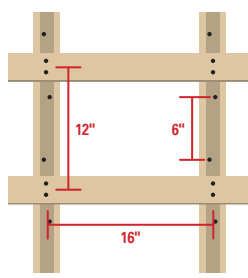


FIGURE 4

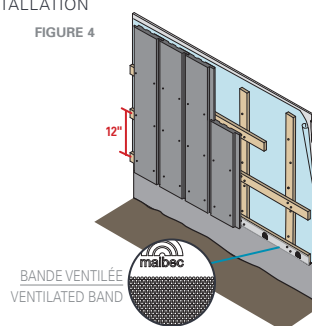


Double lattage obligatoire au Québec et dans les Maritimes.

Double furring is mandatory in Quebec and the Maritimes.

CLOUAGE | NAILING


FIGURE 5

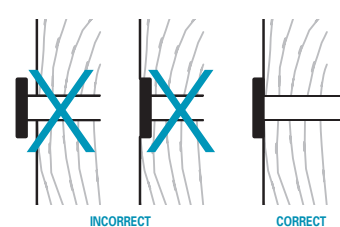

Pénétration minimale de 1" réel dans un substrat solide.

Minimum real penetration of 1" in a solid substrate.


FIGURE 6

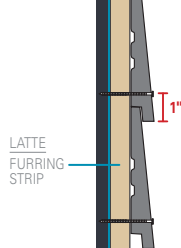

Profilé 6" (Clin rainuré)
Profilés 4"

6" Profile (Rabbeted Bevel)
4" Profiles


FIGURE 7

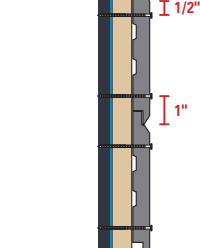

Profilés 6" et 8" (Moderne, Ranch, Gorge et À joint en V)

6" and 8" Profiles (Modern, Channel, Cove and V-Joint)

FIGURE 8

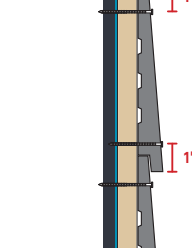


Profilé 8" (Clin rainuré)

8" Profile (Rabbeted Bevel)

PRÉPARATION DU BAS DE MUR ET RANG DE DÉPART | BOTTOM OF WALL PREPARATION AND STARTER COURSE

FIGURE 9

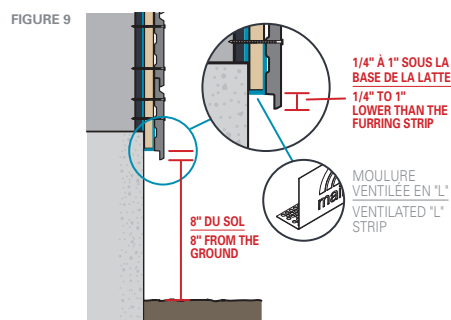

COUPES ET RETOUCHES | JOINTS & TOUCH-UPS

FIGURE 10

Clouez les joints vis-à-vis une latte.

Joints must be nailed to a furring strip.

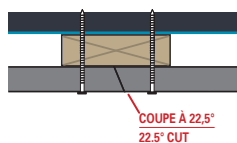


FIGURE 11




FIGURE 12





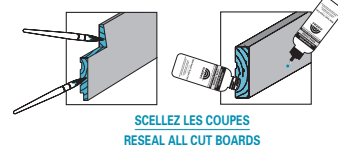



FIGURE 13

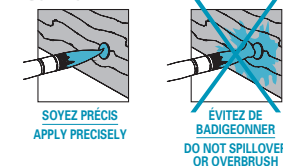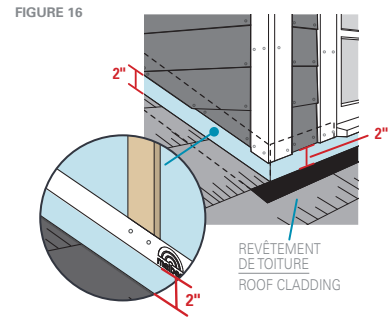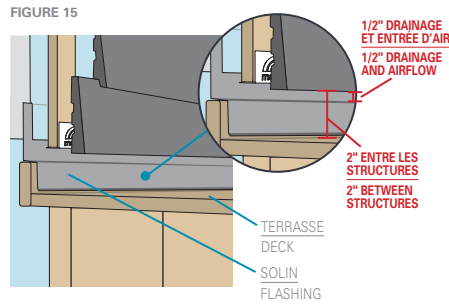


DÉGAGEMENTS | CLEARANCES

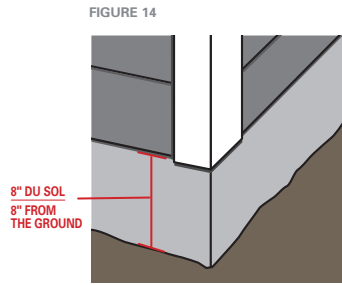


DESSUS DE FENÊTRE | ABOVE WINDOWS

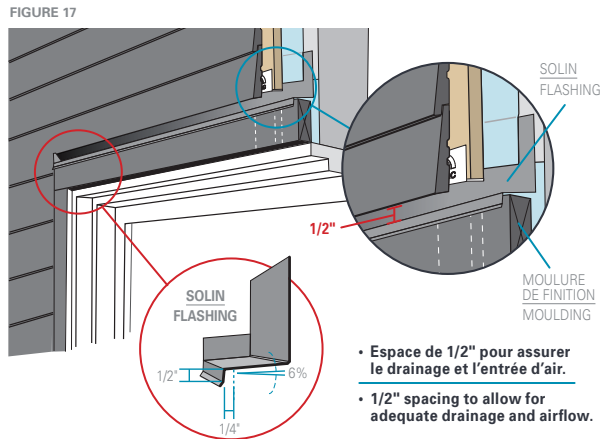


VENTILATION DU DESSOUS DE FENÊTRE | BELOW WINDOWS VENTILATION

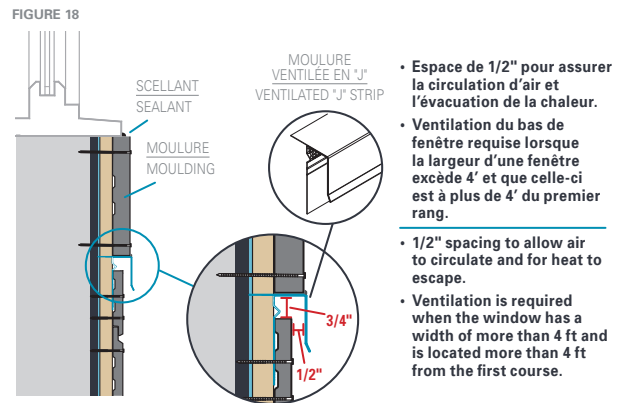

VENTILATION DU HAUT DE MUR | TOP OF WALL VENTILATION

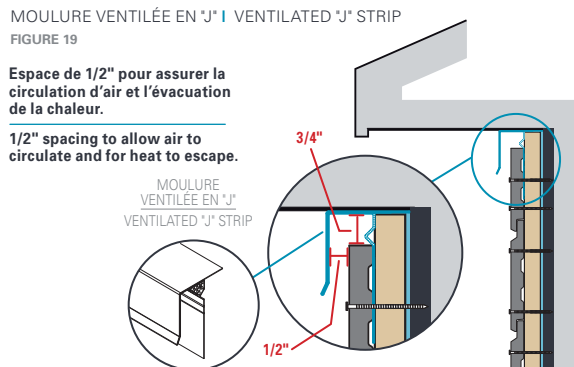

DISPOSITION DES PLANCHES | BOARD ARRANGEMENT

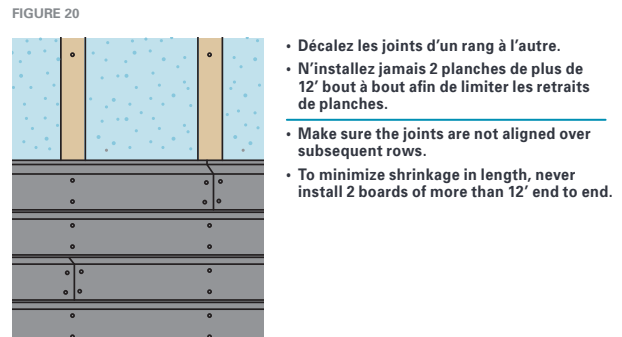

ENTREPOSAGE | STORAGE

- Conservez le revêtement dans un endroit non-chauffé, sec et aéré à au moins 6" du sol. Aucun contact direct avec le sol.
- En tout temps, même durant l'installation, couvrez le revêtement non utilisé avec l'emballage original du produit si celui-ci est en bon état ou avec une toile imperméable.
- La teinture de retouche doit être conservée en tout temps à température de la pièce (max 38°C/100°F).

- Keep the siding in a dry, unheated and well-ventilated area at least 6" from the ground. Never let it come into direct contact with the ground.
- Cover any unused siding with its original packaging at all times, even during installation. If the original packaging is no longer in good condition, cover the siding with a waterproof tarp.
- Touch-up stain must always be kept at room temperature (max 38°C/100°F).

LE RESPECT DES EXIGENCES D'INSTALLATION, D'ENTREPOSAGE ET D'ENTRETIEN DE MAIBEC AINSI QUE DES CODES DU BÂTIMENT EN VIGUEUR DANS VOTRE RÉGION EST OBLIGATOIRE. LES PROBLÈMES CAUSÉS PAR LE NON-RESPECT DE CES EXIGENCES ET CODES POURRAIENT NE PAS ÊTRE COUVERTS PAR LES GARANTIES.

COMPLIANCE WITH MAIBEC'S INSTALLATION, STORAGE AND MAINTENANCE REQUIREMENTS, AND WITH ALL APPLICABLE BUILDING CODES IS MANDATORY. PROBLEMS CAUSED BY FAILURE TO COMPLY WITH THESE REQUIREMENTS AND CODES MAY NOT BE COVERED BY THE APPLICABLE WARRANTIES.